

Mounting Instructions for the PM-DS100SE pole mount bracket

800-736-5094

Parts Required:

- (1) PM-DS100SE pole mount bracket
- (1) Bose DS100SE speaker with speaker mounting plate
- (2) Pieces of banding or hose clamps
- (4) Bolts (1/4-20 of 3/4" or 1" length) *not supplied with bracket*
- (5) Nylon locking nuts (recommended) *not supplied with bracket*

Assembly:

1. Run cable out of pole through PM-DS100SE bracket and into Bose speaker mounting plate.
2. Terminate cable on the Bose speaker mounting plate.
3. Attach Bose DS100SE mounting plate to PM-DS100SE pole mount bracket using (4) bolts and locking nuts.
4. Insert banding or hose clamps into slots on side of PM-DS100SE bracket and pull thru to other side of bracket.
5. Wrap banding around pole, tighten and crimp. If using hose clamps, tighten securely.

NOTE—USE ONLY BANDING AND CLAMPS OF SUFFICIENT STRENGTH TO SUPPORT THE WEIGHT OF THE SPEAKER AND POLE MOUNT BRACKET.

6. Mount DS100SE speaker to mounting plate as usual.

